

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R4642A006CNXA	OPTIM EMK-4-120-440;	4 kvar		1 Policarbonate + Fan	computer PLUS 8TF-C	Automatic switch 250 A + Earth leakage
R3Q641EN00000	OPTIM 1-5-440;	5 kvar		2 Standard	Standard	Standard
R3J0050000K00	OPTIM 3-5-230;	5 kvar		1 Standard	Standard	Automatic switch 63 A + Earth leakage
R3Q651EN00000	OPTIM 1-6,25-440;	6,25 kvar		6 Standard	Standard	Standard
R3Q671EN00000	OPTIM 1-10-440;	10 kvar		3 Standard	Standard	Standard
R3Q771EN00000	OPTIM 2-10,5-440;	10,5 kvar		4 Standard	Standard	Standard
R3L110.	OPTIM 3 P&P-12,5-440;	12,5 kvar		7 Standard	Standard	Standard
R3L1A20000K00	OPTIM 3 P&P-12,5-230;	12,5 kvar		5 Standard	Standard	Automatic switch 63 A + Earth leakage
R3Q681EN00000	OPTIM 1-12,5-440;	12,5 kvar		3 Standard	Standard	Standard
R3L1100000K00	OPTIM 3 P&P-12,5-440;	12,5 kvar		2 Standard	Standard	Automatic switch 63 A + Earth leakage
R3L1A2.	OPTIM 3 P&P-12,5-230;	12,5 kvar		2 Standard	Standard	Standard
R3Q781EN00000	OPTIM 2-12,5-440;	12,5 kvar		2 Standard	Standard	Standard
R3J110EN00K00	OPTIM 3-12,5-440;	12,5 kvar		1 Standard	Standard	Automatic switch 63 A + Earth leakage
R3L110000SK00	OPTIM 3 P&P-12,5-440;	12,5 kvar		1 Standard	computer SMART III 6	Automatic switch 63 A + Earth leakage
R3L1100010K00	OPTIM 3 P&P-12,5-440;	12,5 kvar		1 Autotransf. maniobra	Standard	Automatic switch 63 A + Earth leakage
R3L120.	OPTIM 3 P&P-17,5-440;	17,5 kvar		14 Standard	Standard	Standard
R3L1200000K00	OPTIM 3 P&P-17,5-440;	17,5 kvar		2 Standard	Standard	Automatic switch 63 A + Earth leakage
R3L120000S000	OPTIM 3 P&P-17,5-440;	17,5 kvar		2 Standard	computer SMART III 6	Standard
R3J115.	OPTIM 3-17,5-440;	17,5 kvar		1 Standard	Standard	Standard
R3L1200007K00	OPTIM 3 P&P-17,5-440;	17,5 kvar		1 Standard	computer Plus comunicaciones	Automatic switch 63 A + Earth leakage
R3L120000SK00	OPTIM 3 P&P-17,5-440;	17,5 kvar		1 Standard	computer SMART III 6	Automatic switch 63 A + Earth leakage
R3Q7E1EN00000	OPTIM 2-17,5-440;	17,5 kvar		1 Standard	Standard	Standard
R3Q7F1EN00000	OPTIM 2-20-440;	20 kvar		3 Standard	Standard	Standard
R3L1A8000K0PR	OPTIM 3 P&P-20-230;	20 kvar		1 Standard		Standard
R3L1300000K00	OPTIM 3 P&P-25-440;	25 kvar		5 Standard	Standard	Automatic switch 63 A + Earth leakage
R3Q6F1EN00000	OPTIM 1A-25-440;	25 kvar		5 Standard	Standard	Standard
R3L130.	OPTIM 3 P&P-25-440;	25 kvar		4 Standard	Standard	Standard
R3Q7H1EN00000	OPTIM 2-25-440;	25 kvar		2 Standard	Standard	Standard
R5Y350.	OPTIM FRM-25-440;	25 kvar		1 Standard	Standard	Standard
R5R455.	Optim FRS-25-440;	25 kvar		1 Standard	Standard	Standard
R3L1300007K00	OPTIM 3 P&P-25-440;	25 kvar		1 Standard	computer Plus comunicaciones	Automatic switch 63 A + Earth leakage
R3L130000SK00	OPTIM 3 P&P-25-440;	25 kvar		1 Standard	computer SMART III 6	Automatic switch 63 A + Earth leakage
R3L1300010K00	OPTIM 3 P&P-25-440;	25 kvar		1 Autotransf. maniobra	Standard	Automatic switch 63 A + Earth leakage
R3L132ZG00000	OPTIM 3 P&P-26,25-440;	26,25 kvar		2 Standard	Standard	Standard
R3Q6D1EN00000	OPTIM 1A-30-440;	30 kvar		1 Standard	Standard	Standard
R3Q7J1EN00000	OPTIM 2-30-440;	30 kvar		1 Standard	Standard	Standard
R3L1400000K00	OPTIM 3 P&P-31,25-440;	31,25 kvar		4 Standard	Standard	Automatic switch 63 A + Earth leakage

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R3L140.	OPTIM 3 P&P-31,25-440;	31,25 kvar	1	Standard	Standard	Standard
R3L1A90000L00	OPTIM 3 P&P-31,25-230;	31,25 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L2A6.	OPTIM 5 P&P-35-230;	35 kvar	2	Standard	Standard	Standard
R3L1990000006	OPTIM 5 P&P-35-440;	35 kvar	1	Standard	Standard	Standard
R3L150.	OPTIM 3 P&P-37,5-440;	37,5 kvar	8	Standard	Standard	Standard
R3L1500000K00	OPTIM 3 P&P-37,5-440;	37,5 kvar	1	Standard	Standard	Automatic switch 63 A + Earth leakage
R3L1500010000	OPTIM 3 P&P-37,5-440;	37,5 kvar	1	Autotransf. maniobra	Standard	Standard
R3L160.	OPTIM 3 P&P-43,75-440;	43,75 kvar	15	Standard	Standard	Standard
R3L1600000L00	OPTIM 3 P&P-43,75-440;	43,75 kvar	4	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L160001S000	OPTIM 3 P&P-43,75-440;	43,75 kvar	1	Autotransf. maniobra	computer SMART III 6	Standard
R3J8990000300	OPTIM 6-50-230;	50 kvar	1	Standard	Standard	Manual switch 200 A
R3L1650000L00	OPTIM 3 P&P-50-440;	50 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L165000N0CG	OPTIM 3 P&P-50-440;	50 kvar	1	Standard		Standard
R3L170.	OPTIM 3 P&P-52,5-440;	52,5 kvar	3	Standard	Standard	Standard
R3L1700000L00	OPTIM 3 P&P-52,5-440;	52,5 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L210.	OPTIM 5 P&P-55-440;	55 kvar	14	Standard	Standard	Standard
R3L2100000L00	OPTIM 5 P&P-55-440;	55 kvar	2	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L180.	OPTIM 3 P&P-62,5-440;	62,5 kvar	5	Standard	Standard	Standard
R3L220.	OPTIM 5 P&P-70-440;	70 kvar	3	Standard	Standard	Standard
R3L2200000300	OPTIM 5 P&P-70-440;	70 kvar	2	Standard	Standard	Manual switch 200 A
R3L2200000C00	OPTIM 5 P&P-70-440;	70 kvar	1	Standard	Standard	Automatic switch 160A
R3L220000S000	OPTIM 5 P&P-70-440;	70 kvar	1	Standard	computer SMART III 6	Standard
R3J220000T300	OPTIM 4-75-440;	75 kvar	1	Standard	computer SMART III 12	Manual switch 200 A
R3L230.	OPTIM 5 P&P-90-440;	90 kvar	5	Standard	Standard	Standard
R3L2300000N00	OPTIM 5 P&P-90-440;	90 kvar	3	Standard	Standard	Automatic switch 250 A + Earth leakage
R3L230000K000	OPTIM 5 P&P-90-440;	90 kvar	1	Standard		Standard
R3L230000S0MK	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	computer SMART III 6	Standard
R3L230000C000	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	computer PLUS 8TF-C	Standard
R5S420000N00	OPTIM FR4-100-440;	100 kvar	1	Standard		Standard
R3L240.	OPTIM 5 P&P-105-440;	105 kvar	6	Standard	Standard	Standard
R3L2400000300	OPTIM 5 P&P-105-440;	105 kvar	3	Standard	Standard	Manual switch 200 A
R3L2400000N00	OPTIM 5 P&P-105-440;	105 kvar	2	Standard	Standard	Automatic switch 250 A + Earth leakage
R3L2400000M00	OPTIM 5 P&P-105-440;	105 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R3L250.	OPTIM 5 P&P-135-440;	135 kvar	9	Standard	Standard	Standard
R3L2500000400	OPTIM 5 P&P-135-440;	135 kvar	2	Standard	Standard	Manual switch 250A
R3L2500000N00	OPTIM 5 P&P-135-440;	135 kvar	2	Standard	Standard	Automatic switch 250 A + Earth leakage
R3L250001S000	OPTIM 5 P&P-135-440;	135 kvar	1	Autotransf. maniobra	computer SMART III 6	Standard

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R3L260.	OPTIM 5 P&P-150-440;	150 kvar	5	Standard	Standard	Standard
R3L4A20000LO	OPTIM 8 P&P-162,5-230;	162,5 kvar	1	Standard	Standard	Standard
R54S25000CO00	Optim FR4 P&P-175-440;	175 kvar	1	Standard	computer PLUS 8TF-C	Automatic switch 400 A + Earth leakage
R3L330000C000	OPTIM 9 P&P-225-440;	225 kvar	1	Standard	computer PLUS 8TF-C	Standard
R3L336003T0DV	OPTIM 9 P&P-240-440;	240 kvar	4	Policarbonate	computer SMART III 12	Standard
R3L336003T6DV	OPTIM 9 P&P-240-440;	240 kvar	1	Policarbonate	computer SMART III 12	Manual switch 630 A
R3L340.	OPTIM 9 P&P-255-440;	255 kvar	1	Standard	Standard	Standard
R3L340000C000	OPTIM 9 P&P-255-440;	255 kvar	1	Standard	computer PLUS 8TF-C	Standard
R3L420.	OPTIM 8 P&P-330-440;	330 kvar	1	Standard	Standard	Standard
R54S34.	Optim FR4 P&P-400-440;	400 kvar	1	Standard	Standard	Standard
R54UB6SANT0XA	OPTIM FR8 P&P-520-400-60Hz-7%;	520 kvar	2	#N/A	computer SMART III 12	Standard
R4A304.	OPTIM EMS-C-31,25-440;	C kvar	1	Standard	Standard	Standard
R4A309.	OPTIM EMS-C-43,75-440;	C kvar	1	Standard	Standard	Standard
R4A321.	OPTIM EMS-C-82,50-440;	C kvar	1	Standard	Standard	Standard
R54U42006T000	OPTIM FR8-P&P-750-440;	P&P kvar	1	Policarbonate + Fan	computer SMART III 12	Standard
R3L220AI00000	OPTIM 5-P&P-70-440;	P&P kvar	1	Standard	Standard	Standard